

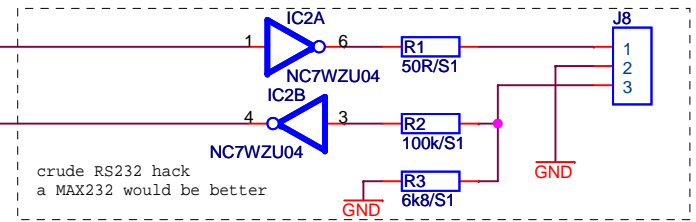


PA pins can be used for analog input signals, as well as as digital inputs. All unused pins, as well as the ISP pins (except reset) can be used as digital inputs.




Remember to disable JTAG in the fuses if using phase inputs 2-5.

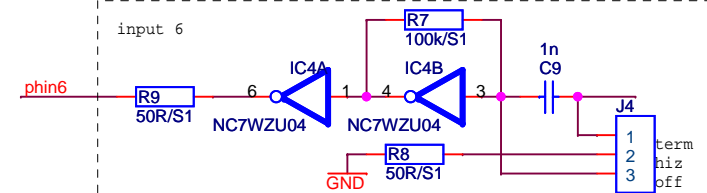

crude RS232 hack
a MAX232 would be better

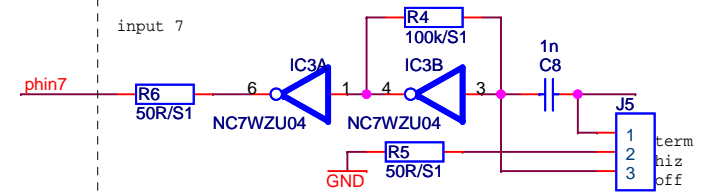

...up to 8 inputs...

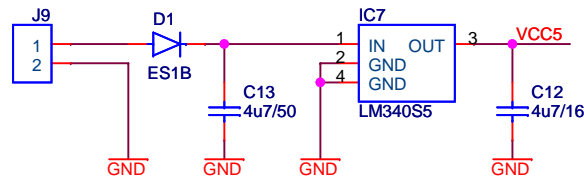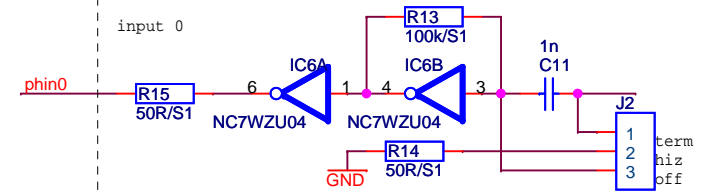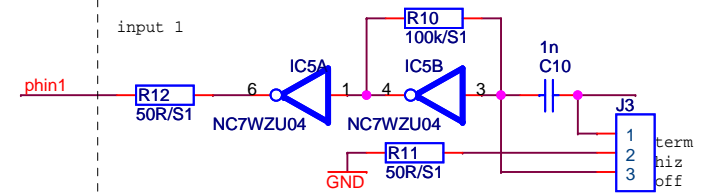

Title		
Very simple multichannel phase comparator - Kasper Pedersen 2008		
Size	Document Number	Rev
A4	KKP20080519-01	A
Date:	Tuesday, May 27, 2008	Sheet 1 of 1